




Monitor III NEO

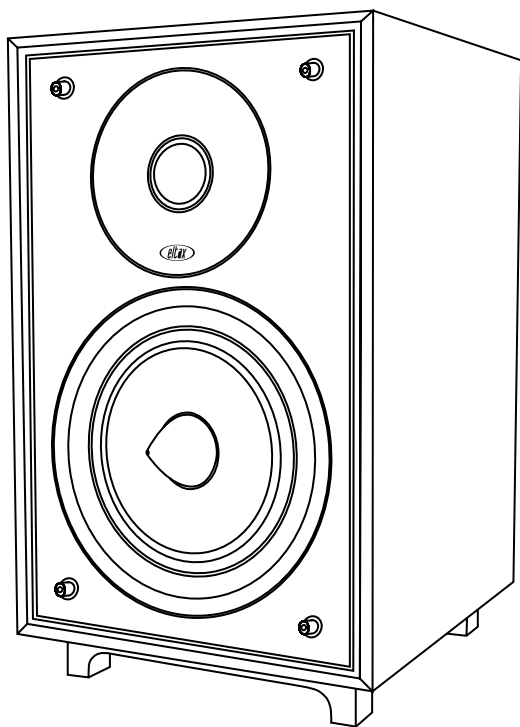

MANUEL D'UTILISATION
USER MANUAL

Cher Client,

Merci d’avoir choisi les produits **Eltax**.
Prenez le temps de lire attentivement ce mode d’emploi avant d’installer vos enceintes. Il contient des conseils pour en tirer le meilleur profit et des instructions pour les utiliser sans risque. Nous vous recommandons vivement de conserver l’emballage et ce mode d’emploi pour d’éventuels usages ultérieurs.

SOMMAIRE

I. Contenu..... 4

II. Installation stéréo..... 4

III. Branchement sur amplificateur Hi-Fi 6

IV. Utilisation7

V. Caractéristiques..... 8



ATTENTION

ASSUREZ-VOUS DE LIRE CE MANUEL D’INSTRUCTIONS
AVANT DE METTRE SOUS TENSION OU DE BRANCHER
CES APPAREILS.

I. CONTENU

- 2 enceintes
- 1 mode d'emploi
- 2 grilles amovibles
- 2 bouchons en mousse pour évent

II. INSTALLATION STÉRÉO

PLACEMENT DES ENCEINTES



Les enceintes Monitor III NEO ont été étudiées pour restituer le plus fidèlement possible tous types de musique, à condition de respecter quelques règles afin d'optimiser leurs performances et obtenir une scène sonore réaliste.

Idéalement, les enceintes doivent être placées de façon symétrique face à la position d'écoute, de manière à former un triangle équilatéral. Les deux enceintes doivent être placées à la même hauteur et à la même distance du mur arrière et des surfaces latérales adjacentes.

Afin d'optimiser le couplage enceinte/pièce d'écoute, nous vous préconisons les essais suivants:

- Avant tout, évitez de positionner les enceintes dans les angles de votre pièce. Il en résultera une augmentation artificielle du niveau de grave, masquant la rapidité et le suivi mélodique (articulation) de ce registre. Si malgré ces précautions vous constatez un renflement du spectre grave, vous pouvez toujours insérer le bouchon en mousse fourni à l'intérieur de l'évent. Il en résultera une baisse de niveau des fréquences infra-graves.
- Dans un premier temps, ajuster l'écartement des deux enceintes, afin de trouver l'équilibre réaliste entre une scène sonore large (enceintes éloignées) et scène sonore respectant la ponctualité des voix (enceintes proches).
- Dans un second temps, éloigner les enceintes du mur arrière par pas de 10 cm afin de trouver l'équilibre entre profondeur de l'image sonore (loin du mur) et production de l'extrême grave (proche du mur).
- Enfin, ajuster l'orientation des enceintes en les pivotant progressivement vers le centre de la zone d'écoute. Si vous laissez les enceintes parallèles, vous pouvez être amené à les rapprocher mutuellement, si vous les orientez à plus de 20°, vous pouvez augmenter leur écartement.


Remarque: Il est recommandé de placer les enceintes bibliothèques Monitor III NEO sur des pieds afin de satisfaire le confort d'écoute.

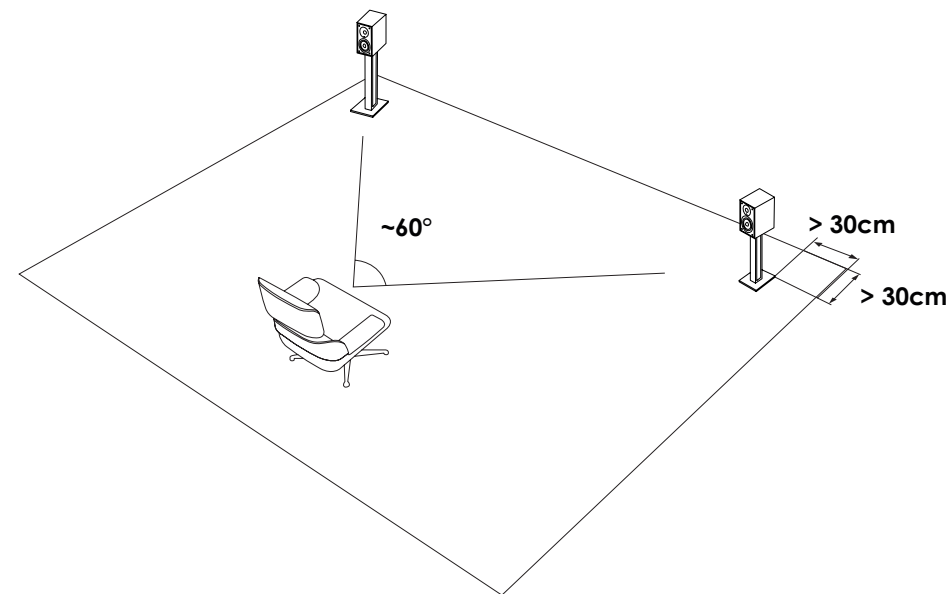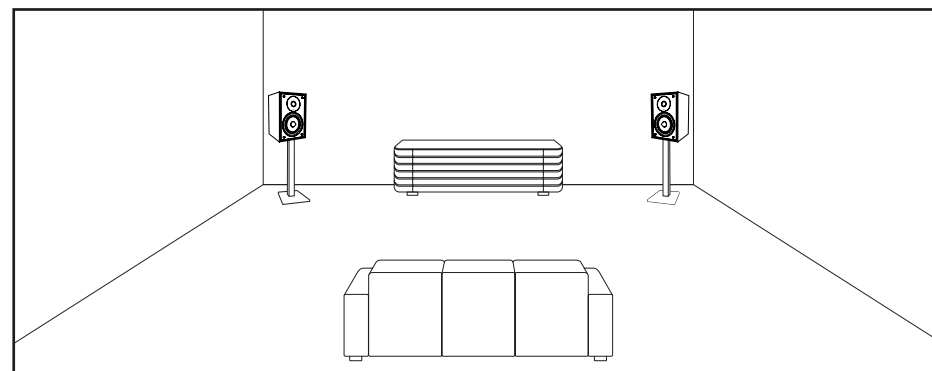

III. BRANCHEMENT SUR AMPLIFICATEUR HI-FI

Le respect de la polarité des enceintes est impératif. Assurez-vous de bien connecter le pôle « + » (ROUGE) de l'enceinte au pôle « + » de l'amplificateur. Puis assurez-vous de bien connecter le pôle « - » (NOIR) de l'enceinte au pôle « - » de l'amplificateur.

Une erreur de branchement provoquerait une image stéréo brouillée et une perte de graves. Utilisez du câble de bonne qualité prévu pour le branchement des enceintes.

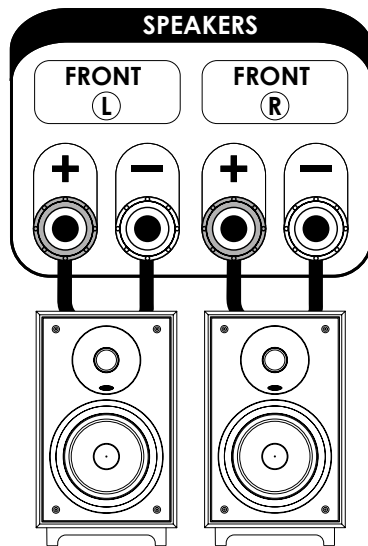

TOUS LES BRANCHEMENTS DOIVENT ÊTRE EFFECTUÉS AVEC L'AMPLIFICATEUR ÉTEINT.

IV. UTILISATION

1. RODAGE

Sorties de leur emballage, les enceintes Monitor III NEO ne sont pas encore capables de reproduire avec la même efficacité l'ensemble des fréquences qu'elles sont censées diffuser.

Les haut-parleurs utilisés dans la gamme Monitor NEO sont des éléments mécaniques complexes qui nécessitent une période d'adaptation pour fonctionner au mieux de leurs possibilités et s'adapter aux conditions de température et d'humidité de votre environnement.


Cette période de rodage peut se prolonger sur plusieurs semaines, mais vous pouvez l'accélérer en faisant fonctionner vos enceintes entre 50 et 100 heures consécutives, à niveau modéré et en diffusant une station de radio.

2. ENTRETIEN

Afin d'améliorer la durée de vie de vos enceintes, nous vous conseillons un entretien régulier de celles-ci. Pour le dépoussiérage, un chiffon doux suffira. Si l'enceinte est tâchée, nous vous recommandons simplement l'utilisation d'un chiffon humide, avec un peu de savon doux si nécessaire. La façade laquée peut être nettoyée avec un chiffon doux et un nettoyant pour vitres classique.

Ne jamais utiliser de solvants, détergents, alcools ou produits corrosifs, grattoirs ou utensiles récurant qui pourraient endommager l'enceinte. Ne placez pas vos enceintes trop proches d'une source de chaleur.

V. CARACTÉRISTIQUES

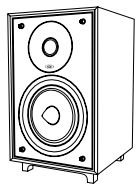

Monitor III NEO

Type	Enceinte bibliothèque 2 voies Bass-reflex (down-firing)
Puissance	60 W RMS / 100 W Crête
Haut-parleurs	Tweeter: 25 mm Dôme Grave-médium: 130 mm Pulpe de cellulose enduit avec ogive en polypropylène
Réponse en fréquence	55 - 22000 Hz (±3dB)
Filtre répartiteur	3100 Hz - 12 dB / 12 dB
Impédance nominale	6 - 8 Ω
Sensibilité	88 dB / 1W / 1m
Dimensions sans grille	L195 × H325 × P218 mm
Dimensions avec grille	L195 × H325 × P229 mm
Poids (pièce)	4,4 kg
Finitions	Blanc - Noir - Bois clair - Bois foncé

AVERTISSEMENT

Déballage

L'emballage (cartons et mousses) a été conçu pour protéger efficacement vos enceintes et votre électronique Eltax lors des transports et expéditions. Nous vous recommandons vivement de les conserver pour un usage ultérieur.

Protégez l'environnement



Si vous souhaitez vous débarrasser de l'emballage, notez que celui-ci est recyclable. Nous vous invitons à prendre les dispositions pour le meilleur respect de l'environnement suivant les possibilités qui vous sont offertes (tri sélectif par exemple). À la fin de sa vie, cet appareil ne doit pas être jeté dans une poubelle classique. Il doit être retourné dans un centre de recyclage pour équipements électroniques. Ce symbole sur le produit indique qu'il est conçu pour être recyclé suivant un procédé particulier. Vous ferez ainsi une contribution très significative pour la préservation de l'environnement. Cet appareil respecte la directive européenne RoHS. Cela signifie qu'il ne dégage pas de substances polluantes lors du recyclage (Plomb, Mercure, Cadmium, Chrome hexavalent, Polybromobiphenyles, Polybromodiphenyléthers).



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

Précautions d'usage

Ce produit est construit suivant des normes rigoureuses et en respectant les standards de sécurité. Vous devez cependant l'utiliser dans des conditions normales comme décrit ci-dessous. Dans le cas où votre appareil est amplifié et nécessite une alimentation, vérifiez la tension d'alimentation électrique avant de le raccorder à l'alimentation secteur. Cette électronique a été conçue pour pouvoir fonctionner dans divers pays. Nous vous conseillons de brancher complètement votre produit avant de le raccorder au secteur. Manipulez le cordon d'alimentation avec précaution. Quand vous débranchez le cordon d'alimentation d'une prise secteur, faites-le en tirant sur la fiche et non sur le câble. Si vous envisagez de ne pas utiliser cet appareil pendant une période prolongée, débranchez-le du secteur. N'ouvrez pas le boîtier. Cet appareil ne contient aucune pièce changeable par l'utilisateur. L'accès à l'intérieur peut provoquer des chocs électriques. Toute modification du produit aura pour conséquence d'invalider la garantie. Si un objet ou un liquide tombe dans le boîtier, prenez contact avec votre revendeur pour qu'un technicien le retire de l'appareil en toute sécurité.

GARANTIE

Les appareils Eltax sont conçus et fabriqués suivant les meilleurs standards de qualité. Si votre appareil Eltax présente un défaut, Eltax ou un revendeur agréé pourra prendre en charge la réparation dans les limites de cette garantie. La garantie est de 2 ans à partir de la date d'achat chez un revendeur agréé.

Définition de la garantie

La garantie est limitée à la réparation de l'équipement Eltax. En aucun cas, le transport, les coûts associés ainsi que l'installation ne sont couverts par la garantie. La garantie n'est applicable qu'au premier propriétaire et n'est pas transférable. La garantie ne s'applique pas dans les cas suivants :

- Le dommage est causé par une installation ou un branchement incorrect.
- Le dommage est causé par un usage incorrect, autre que celui décrit dans ce manuel, par négligence, ou modification du produit par une personne non autorisée par Eltax.
- Les dommages causés par des accidents, la foudre, l'eau, le feu, une chaleur excessive ou toutes autres causes ne pouvant être contrôlées par Eltax.

- Dans le cas d'une réparation par du personnel non autorisé.
- Cette garantie complète les garanties légales en vigueur dans le pays du revendeur agréé.

Comment faire réparer un produit sous garantie

Prenez simplement contact avec votre revendeur agréé. Pour garantir un transport dans de bonnes conditions, utilisez toujours l'emballage d'origine. Si vous utilisez un produit dans un autre pays que celui où vous l'avez acheté, prenez contact avec l'importateur de votre pays de résidence qui vous orientera vers un centre technique agréé.

La liste des distributeurs agréés est disponible sur le site : www.eltax.com

Pour valider votre garantie, vous devez produire comme preuve d'achat l'original de votre facture contenant la date de votre achat et le cachet de votre revendeur.

CONTACT ET RETOUR D'INFORMATION

Nous aimerions beaucoup avoir de vos nouvelles ! Notre équipe lira attentivement vos commentaires. Écrivez-nous à contact@av-industry.com ou contactez-nous directement sur Facebook et Instagram. Pour plus d'informations, consultez : www.eltax.com



LA POLITIQUE DE ELTAX EST D'INCORPORER CONTINUUELLEMENT
DES AMÉLIORATIONS DANS SES PRODUITS.
TOUTES LES SPÉCIFICATIONS SONT SUSCEPTIBLES D'ÊTRE MODIFIÉES
SANS PRÉAVIS.

SI VOUS AVEZ DES QUESTIONS, VEUILLEZ VISITER NOTRE SITE WEB :
WWW.ELTAX.COM

NOUS CONTACTER :
CONTACT@AV-INDUSTRY.COM



@eltax_speakers / @eltax

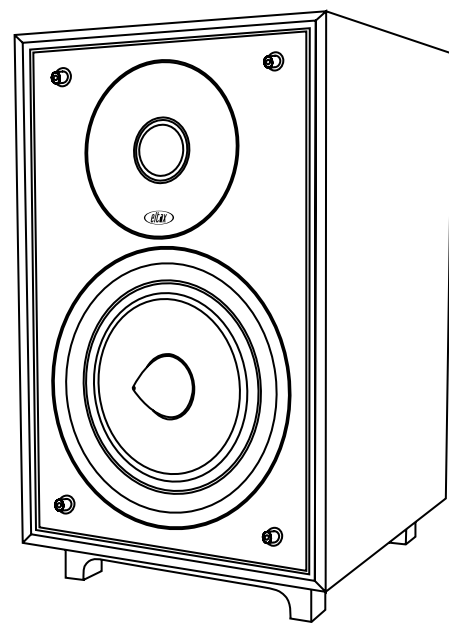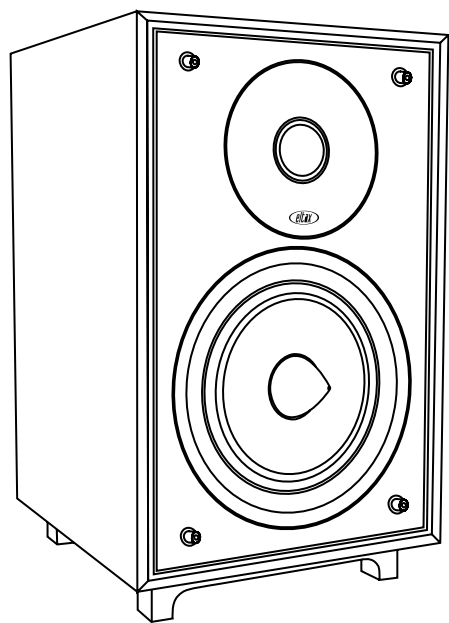

Dear Customer,

Thank you for choosing **Eltax** products.
Please take the time to carefully read this user manual before installing your
loudspeakers. It contains advice to get the most out of them and instructions for
safe use. We highly recommend keeping the packaging and this user manual for
potential future use.

SUMMARY

I. Content.....16

II. Stereo setup16

III. Hi-Fi amplifiers connections18

IV. Use19

V. Specifications..... 20



WARNING

MAKE SURE TO READ THIS INSTRUCTION MANUAL
BEFORE TURNING THE POWER ON OR HOOKING UP
THESE DEVICES.

I. CONTENT

- 2 loudspeakers
- 1 user manual
- 2 removable grids
- 2 foam plugs for port

II. STEREO SETUP

POSITION OF THE LOUDSPEAKERS



The Monitor NEO loudspeakers have been designed to reproduce all types of music as accurately as possible, provided that a few rules should be followed to optimize performance and achieve a realistic sound image.

Ideally, the loudspeakers should be placed symmetrically in front of the listening position to form an equilateral triangle. The cabinets should be placed at the same height and the same distance from the rear wall and the adjacent side surfaces.

In order to optimize the setup of the loudspeakers in your listening room, we recommend the following tests:

- Above all, you should avoid positioning the loudspeakers in the corners of your room. The result will be an artificial increase in the level of bass, masking the speed and details of this range. If, despite these precautions, you notice a boost in the low-frequency spectrum, you can always insert the foam plug provided into the port. This will result in a decrease in the level of sub-bass frequencies.
- First, adjust the spacing of the two loudspeakers in order to find the realistic balance between a wide sound image (wide apart loudspeakers) and a vocal image precision (close loudspeakers).
- Secondly, move the loudspeakers away from the rear wall by steps of 10 cm to find the balance between the depth of the sound image (far from the back wall) and the level of the extreme low frequencies (close to the back wall).
- Finally, adjust the loudspeakers orientation by turning them gradually toward the center of the listening area. If you leave the loudspeakers parallel, you may want to bring them closer together, if you orient them more than 20° , you may increase their spacing.


Note: It is recommended that the Monitor III NEO bookshelf loudspeakers be placed on stands for maximum listening comfort.

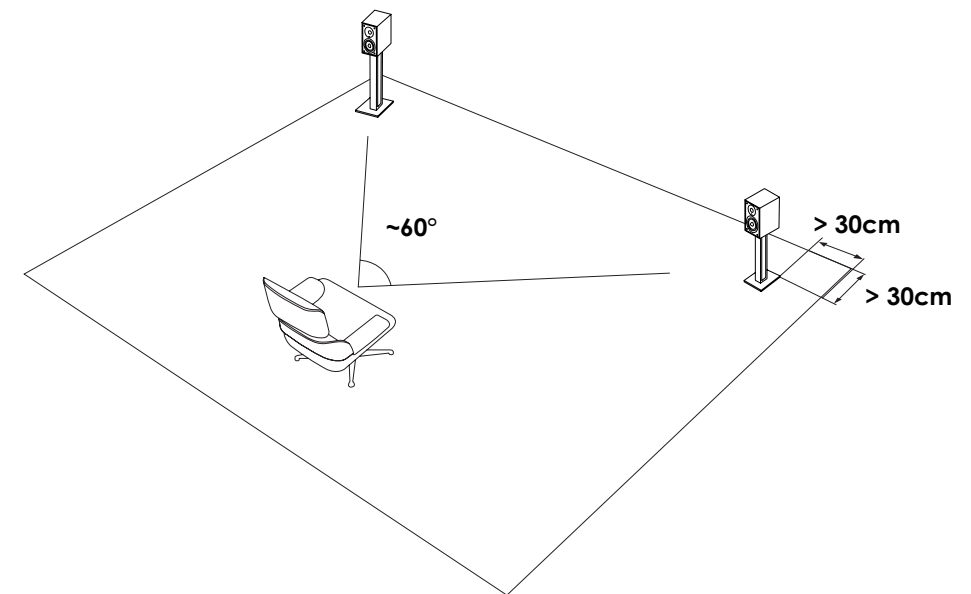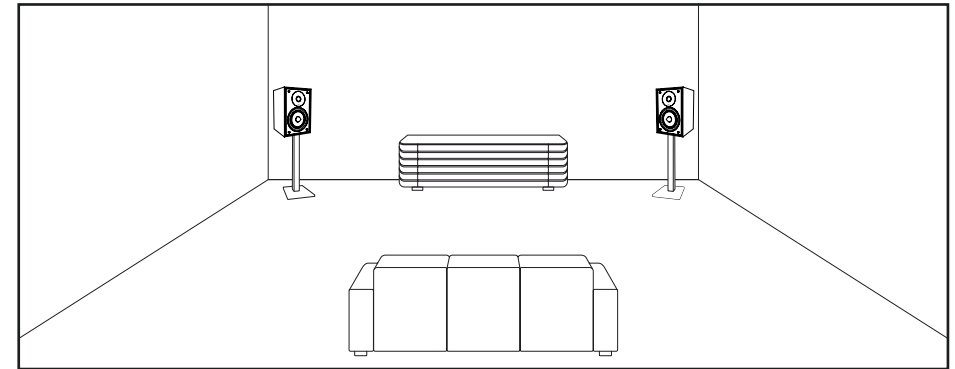

III. HI-FI AMPLIFIERS CONNECTIONS

It is essential to connect the loudspeakers using the correct polarity. Make sure to connect the “+” (RED) terminal of the loudspeaker to the “+” output terminal of the amplifier. Then, make sure to connect the “-” (BLACK) terminal of the loudspeaker to the “-” output terminal of the amplifier.

A wrong connection would cause a cabled stereo image and loss of bass. Use a high-quality cable designed for connecting loudspeakers.

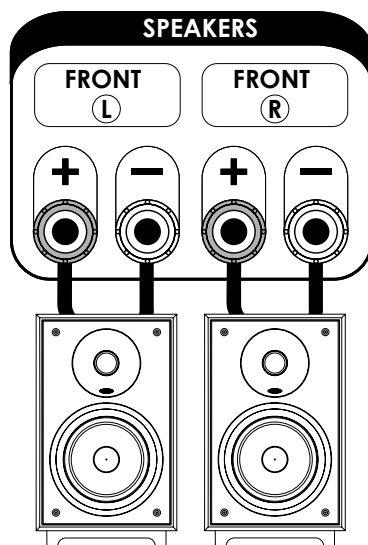

ALL THE CONNECTIONS MUST BE MADE WITH THE EQUIPMENT TURNED OFF.

IV. USE

1. BURN-IN PERIOD

Out of the box, Monitor III NEO loudspeakers are not yet capable of reproducing all the frequencies they are supposed to broadcast with the same efficiency.

The loudspeakers used in the Monitor NEO range are complex mechanical components that require a period of adjustment to work at their best and adapt to the temperature and humidity conditions of your environment.


This break-in period can last several weeks, but you can speed it up by running your loudspeakers for between 50 and 100 consecutive hours, at a moderate level and playing a radio station.

2. CLEANING INSTRUCTIONS

To improve the life of your loudspeakers, we recommend regular maintenance. For dusting, a soft cloth will suffice. If the loudspeaker is stained, we simply recommend using a damp cloth, with a little mild soap if necessary. The lacquered front panel can be cleaned with a soft cloth and a conventional glass cleaner.

Never use solvents, detergents, alcohol or corrosive products, scrapers or scouring utensils that could damage the loudspeaker. Do not place your loudspeakers too close to a heat source.

V. SPECIFICATIONS

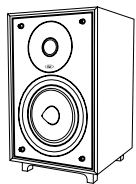

Monitor III NEO

Type	Bookshelf loudspeaker 2 way Bass-reflex (down firing)
Power	60 W RMS / 100 W Peak
Drive Units	Tweeter: 1" Dome Mid-woofer: 5" Coated cellulose pulp, with polypropylene phase plug
Frequency response	55 - 22000 Hz (±3dB)
Crossover	3100 Hz - 12 dB / 12 dB
Nominal Impedance	6 - 8 Ω
Sensitivity	88 dB / 1W / 1m
Dimensions without grille	W195 × H325 × D218 mm
Dimensions with grille	W195 × H325 × D229 mm
Weight (unit)	4,4 kg
Finishes	White - Black - Light wood - Dark wood

WARNING

Packaging

The packaging (box and packing) was designed for effective protection of your Eltax loud-speakers and electronics during transportation and shipping. We highly recommend keeping the packaging and this user manual for potential future use.

Protect the environment



If you wish to dispose of the packaging, please do so in the most environmentally responsible manner possible according to available measures (for example, sorted recycling). At the end of its life, this device should not be disposed of in the same way as household waste. It should be returned to a center for the recycling of electronic equipment. This symbol on the product indicates that it has been designed so that it can be recycled according to specific procedures. You will therefore be making a significant contribution to the protection of the environment. This device respects the RoHS European directive. This means that it does not emit polluting substances when it is recycled (such as lead, mercury, cadmium, hexavalent chromium, polybromobiphenyls, polybromodiphenylethers).



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

Precautions for proper use

This product was designed according to rigorous norms and complies with safety standards. It should only be used under normal conditions as described below. If the device is amplified and need some power supply, verify the electrical voltage before connecting it to a power source. This electronic device was designed to work in numerous countries. We advise you to hook it up completely before connecting it to the AC power source. Take care when unplugging the power cord. When you unplug the power cord from the power source, do so by pulling on the head of the plug rather than on the cable. If you do not expect to use this device for a prolonged period of time, you are advised to unplug it from the power source. Do not open the case. This device contains no parts that can be exchanged by the user. Accessing the inside of this device's case can lead to electric shock. Any modification to the product will nullify the guarantee. If a foreign object or liquid falls into the case, contact your retailer to arrange for a technician to remove it from the device safely.

WARRANTY

Eltax products have been designed and manufactured to the highest quality standards. If something goes wrong with your product, Eltax or its authorized distributor / dealer will handle the service and repair under these limited warranty terms. This limited warranty is valid for a 2-year period from original purchase date from an authorized Eltax dealer.

Terms of limited warranty

The warranty is limited to equipment repair. Neither transportation, nor any other costs, nor any risk for removal, transportation and installation of products is covered by this warranty. The warranty is only valid for the original purchaser and is not transferable. The warranty will not apply in cases other than defects in materials and / or workmanship at the date of purchase and will not be applicable in the following cases:

- Damages caused by wrong or incorrect installation or connection.
- Damages caused by incorrect use, other use than the one described in the owner's manual, negligence, unauthorized modification or use of parts or of accessories that are not authorized by Eltax.
- Damages caused by unauthorized, unsuitable or faulty ancillary equipment.

- Damages caused by accidents, lightning, water, fire, heat or any other disturbance that would not be under Eltax control or responsibility.
 - For products, which serial number has been altered, deleted, removed or made illegible.
 - In case of repair and service executed by an unauthorized service person.
- This warranty complements any national/federal/regional law obligations of local distributors/dealers and does not affect your statutory rights as a customer.

To claim repair under warranty

To claim repair or service under warranty you simply have to contact your local Eltax dealer, from whom your equipment has been purchased. To ensure that you will be able to ship your damaged product in correct manner, always retain the original packaging of your Eltax equipment. If you cannot contact your original dealer, or if you are using your Eltax product outside the purchase country, you should contact Eltax national distributor in the residence country, who will advise where the equipment can be serviced.

You can also visit our web site to check our contact information: **www.eltax.com**

To validate your warranty, you need to produce, as a proof of purchase, your original purchase invoice specifying the date of purchase and stamped by your dealer.

CONTACT & FEEDBACK

We would love to hear from you! Our professionals will read your feedback carefully. Write to us at **contact@av-industry.com** or contact us directly on Facebook and Instagram.

For more information, visit: **www.eltax.com**

ELTAX'S POLICY IS TO CONTINUOUSLY INCORPORATE IMPROVEMENTS INTO OUR PRODUCTS.
ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

IF YOU HAVE ANY QUESTIONS, PLEASE VISIT OUR WEBSITE:
WWW.ELTAX.COM

CONTACT US:
CONTACT@AV-INDUSTRY.COM



[@eltax_speakers](https://www.instagram.com/eltax_speakers) / [@eltax](https://www.facebook.com/eltax)

© Eltax 2026
Eltax is a registered trademark of AV Industry.

AV INDUSTRY SAS - www.av-industry.com
309 Avenue du Général de Gaulle - 94500 - Champigny-sur-Marne



Monitor III NEO